

NOTES

1.) ALL STL. MEMBERS COATED W/ ZINC RICH EPOXY THEN FINISHED W/ POLYESTER POWDER COATING.

- 2.) 1/2" X 3 3/4" EXPANSION ANCHOR BOLTS PROVIDED.
- 3.) CUSTOM LETTERING AVAILABLE FOR RECESSED SIDE PANELS (TOTAL OF 37 SPACES)
 - ☐ CUSTOM LETTERING (37 SPACES)

LENGTH OPTIONS

- ☐ 6' BENCH
- ☐ 8' BENCH

DuMor, inc.

BENCH

DATE DRAWN: 3/22/94
DRAWN BY: AH
DATE REV.: 11/21/99
REV. BY: JSB

REV. DRAWING NUMBER

58 SERIES

SHEET 1 OF 2

NOTES:

- 1.) DURING ASSEMBLY PROCEDURE; DO NOT COMPLETELY TIGHTEN HARDWARE.
- 2.) THE ACTUAL PARTS WILL NOT BE NUMBERED. NUMBERS ONLY APPLY TO DRAWING.
- 3.) UPON COMPLETION OF ASSEMBLY SQUARE ALL COMPONENTS THEN TIGHTEN ALL HARDWARE.
- 4.) MOUNT AND ANCHOR AS SPECIFIED.

TOOLS REQ'D

3/4" WRENCH 5/16" ALLEN WRENCH 1/2" MASONRY DRILL BIT DRILL


RATCHET STRAP (PROVIDED)

PARIS LIST					
ITEM	QTY	PART NO	DESCRIPTION		
1	2	0-57-00-02	CAST IRON BENCH SUPPORT		
2	1	0-57-60-04	71 3/4" PIPE BRACE		
3	1	0-58-60-01	6' STL SEAT		
4	6	1-12-065	1/2" X 2 1/2" FLT SKT HD CAP SCR		

DADTO LICT

KITS PROVIDED

ITEM	QTY	PART NO	DESCRIPTION	
5	1	K-FC0840-6	1/2" CAP HARDWARE KIT (6PC)	
6	1	K-ANC0860-4	1/2" X 3 3/4" SS ANCHOR KIT (4PC)	

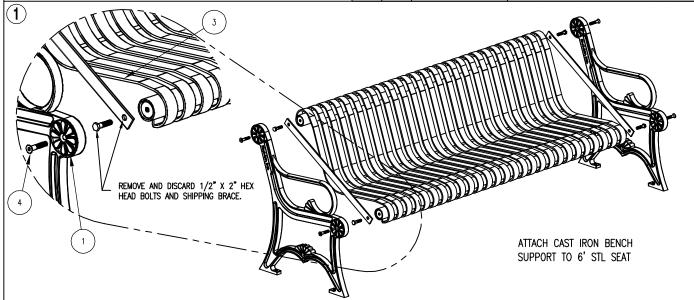





PLACE SEAT ASSEMBLY ON WORK SURFACE ALLOWING ACCESS TO ENDS. PLACE RATCHET STRAP AROUND SEAT ASSEMBLY AS SHOWN ABOVE.

1B)



TIGHTEN STRAP UNTIL SHIPPING BRACKET BECOMES LOOSE. THEN REMOVE AND DISCARD BOLTS & SHIPPING BRACKET.

(1C)




ATTACH CAST SUPPORT TO SEAT ASSEMBLY. IF HOLES IN CASTING DO NOT ALIGN WITH THE SEAT ASSEMBLY, ADJUST BY USING THE RATCHET STRAP.

(1D)



TIGHTEN HARDWARE THEN REMOVE RATCHET STRAP AND REPEAT THIS PROCEDURE ON THE OTHER END OF BENCH.

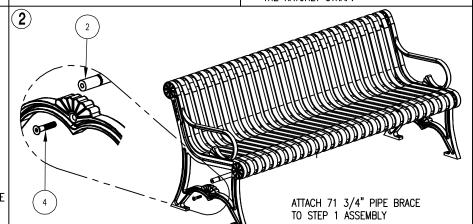



ASSEMBLY INSTRUCTIONS

DATE DRAWN	
DRAWN BY:	AH
DATE REV. :	11/21/99
REV. BY : JS	SB

REV. DRAWING NUMBER

58 SERIES

SHEET 2 OF 2